

Switch Bank	Purpose	Function	DIP Switch				*Old Style (14DIP) PCB Notes*		
			1	2	3	4			
S3	Cooling Airflow	A	Off	Off					
		B	On	Off					
		C	Off	On					
		D	On	On					
	Trim Adjust	+5%			Off	Off		Normal	
		-5%			On	Off		+10%	
		+10%			Off	On		-10%	
		-10%			On	On		Normal	
S4	Ramping Profile	A	Off	Off					
		B	On	Off					
		C	Off	On					
		D	On	On					
	Heating Airflow	A			Off	Off			
		B			On	Off			
		C			Off	On			
		D			On	On			
S5	Dehum	Disabled	Off						
		Enabled	On						
	Trim Enable	Disabled		Off					Unused
		Enabled		On					
	Continuous Fan	25%			Off	Off		Non-Existent (no physical DIPs on PCB)	
		50%			On	Off			
		75%			Off	On			
		100%			On	On			
S1	Heating Off Delay	90	Off	Off					
		120	On	Off					
		150	Off	On					
		180	On	On					
	Thermostat Setup	1 Stage Stat			Off				
		2 Stage Stat			On				
		1 Stg - 5 Min Delay				Off			
		1 Stg - Auto Delay				On			

**AMVVC95/GMVVC95**  
 \*\*black bar indicates factory default

Purpose	Function	DIP Switch				*Old Style (11DIP) PCB Notes*
		S1	S2	S3	S4	
Cooling Airflow	A	Off	Off			
	B	On	Off			
	C	Off	On			
	D	On	On			
Trim Adjust	+5%			Off	Off	Normal
	-5%			On	Off	+10%
	+10%			Off	On	-10%
	-10%			On	On	Normal
Purpose	Function	DIP Switch				*Old Style (11DIP) PCB Notes*
		S4	S5	S6	S7	
Ramping Profile	A	Off	Off			
	B	On	Off			
	C	Off	On			
	D	On	On			
Dehum	Disabled			Off		
	Enabled			On		
Trim Enable	Disabled				Off	Unused
	Enabled				On	
Purpose	Function	DIP Switch			NOTE**  IF AN "EC" ERROR IS ENCOUNTERED ON STARTUP, VERIFY THAT THE ELECTRIC HEATER DIP SWITCHES HAVE BEEN SET TO THE APPROPRIATE HEATER SIZE.	
		S9	S10	S11		
Heat Kit KW	21 KW	Off	Off	Off		
	20 KW	Off	Off	On		
	15 KW	Off	On	Off		
	10 KW	Off	On	On		
	8 KW	On	Off	Off		
	6 KW	On	Off	On		
	5 KW	On	On	Off		
	3 KW	On	On	On		
Purpose	Function	DIP Switch		*Old Style (11DIP) PCB Notes*		
		S12	S13			
Continuous Fan	25%	Off	Off		Non-Existent (no physical DIPs on PCB)	
	50%	On	Off			
	75%	Off	On			
	100%	On	On			

**AVPTC/MBVC**  
 \*\*black bar indicates factory default