

EWC UT-3000 Zone Control



- The UT-3000 controls up to three zones (single board).
 - Up to five zones (twinned) using 24V power open/close motorized dampers.
- Twinning the EWC requires using “system” outputs (1-2-R-C) of the UT-3000 zoning board to be twinned, connected to the corresponding “Zone 2” or “Zone 3” inputs on the main UT-3000 zoning board.
- EWC Zoning complies with Manual Zr (ANSI/ACCA 11 Manual Zr – 2018)
- When paired with EWC you must set lockout temperatures from the UT-3000 Zone Control Board menus.

